


New Parts for Strong Quality

blacktech Number	OEM Part Number	Cross References	Application
RML 74420 C2	VDL 5015337	Contitech 836 N P14	Bus
RML 74425 C3	DAF 1 697 682	Contitech 887 M K3	Truck
RML 77657 C1	Mercedes A 960 320 34 57	Contitech 6131 N P40	Truck

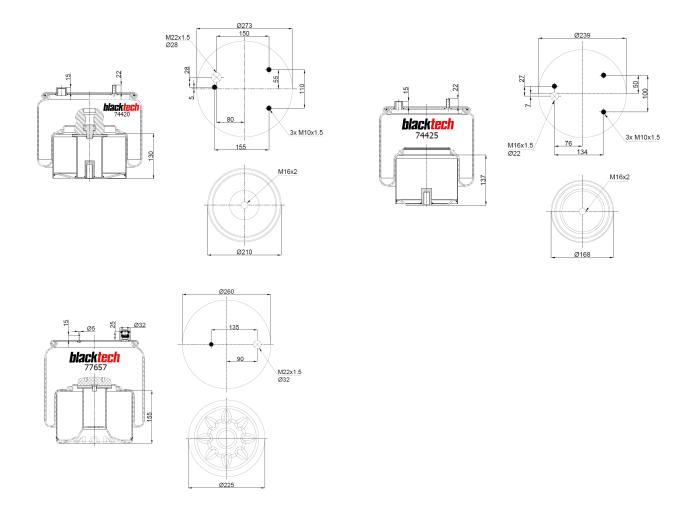


The above mentioned blacktech reference is available in the Independent Aftermarket: Our broad product portfolio offers more than 1,200 blacktech Air Springs to choose from, covering more than 80 % of all major vehicle applications. **blacktech Air Springs – Designed Strong and Durable**.




New Parts for Strong Quality

blacktech Number	OEM Part Number	Cross References	Application
110 68 C	NA	NA	Cabin
2C 18-195 P06	NA	NA	Caravan
75073 CP1	BPW 05.429.43.30.0	DT 10.16039	Trailer



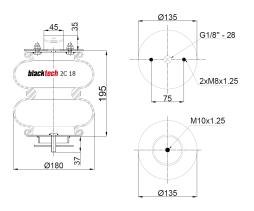

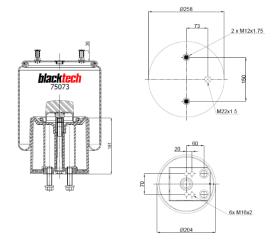

The above mentioned blacktech reference is available in the Independent Aftermarket: Our broad product portfolio offers more than 1,200 blacktech Air Springs to choose from, covering more than 80 % of all major vehicle applications. **blacktech Air Springs – Designed Strong and Durable**.